

# CONIKA | The new Sieve Mill For Deagglomerating and Grinding your raw materials





## Novelty

- > Intuitive touch screen operation
- > Adjustable spacing between the rotor and sieve
- > Available in three sizes to cover all applications
- > Highest quality by IKA®



designed  
to work perfectly

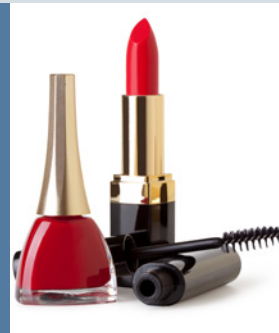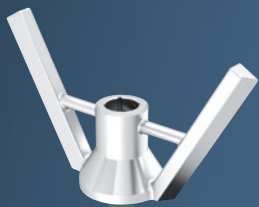

The CONIKA conical sieve mill is the ideal solution for breaking up agglomerates and for grinding the raw materials in your processes.

The CONIKA consists of a conical sieve and an internal rotor that reliably shears the dry or moist powder and granules through the sieve.

The touchscreen makes operating the CONIKA simple and intuitive. The seal is quick and easy to replace, keeping maintenance costs very low.



	CONIKA 6	CONIKA 8	CONIKA 10
Flow capacity [kg/h]	500–1,500	1,000–2,300	2,000–4,000
Motor power [kW]	4	4	5.5
Rotor speed [min <sup>-1</sup> ]	2,000	2,000	1,500
Frequency [Hz]	50/60*	50/60*	50/60*
Voltage [V]	230/400**	230/400**	230/400**

\*Optional

\*\*More electrical voltages available



### Modular

The sieve mill is available in three sizes and the modular system can be converted according to the application.



### Flexible

The CONIKA is available as a mobile stand-alone system, but can also be integrated inline in your process.

**000 «Диаэм»**

Москва  
ул. Магаданская, д. 7, к. 3 ■ тел./факс: (495) 745-0508 ■ sales@dia-m.ru

[www.dia-m.ru](http://www.dia-m.ru)

**С.-Петербург**  
+7 (812) 372-6040  
spb@dia-m.ru

**Новосибирск**  
+7 (383) 328-0048  
nsk@dia-m.ru

**Воронеж**  
+7 (473) 232-4412  
vrn@dia-m.ru

**Йошкар-Ола**  
+7 (927) 880-3676  
nba@dia-m.ru

**Красноярск**  
+7 (923) 303-0152  
krsk@dia-m.ru

**Казань**  
+7 (843) 210-2080  
kazan@dia-m.ru

**Ростов-на-Дону**  
+7 (863) 303-5500  
rnd@dia-m.ru

**Екатеринбург**  
+7 (912) 658-7606  
ekb@dia-m.ru

**Кемерово**  
+7 (923) 158-6753  
kemerovo@dia-m.ru

**Армения**  
+7 (094) 01-0173  
armenia@dia-m.ru

